

250 Yard Launcher
DO NOT STRETCH
LAUNCHER TUBING
MORE THAN EIGHT
FEET!

WARNING

Facial fractures and severe eye damage.
Water balloons are shot at speeds up to 75 mph.
Never shoot at or near people, animals or
personal property.

INSTRUCTIONS

NOTE: Use small round water balloons and fill them to the size of a tennis ball. If the balloons break as they are leaving the pouch, it is likely that you are holding the handles further than three feet apart or your balloons are too full. Hold the ENTIRE handle assembly in your hand, do not insert hand between tubing and handle!

THREE PERSON METHOD: Two players stand three feet apart facing their target, each grasping one of the vinyl grips with their inside hand. A third player (launcher) will then load the water balloon into the pouch with one hand holding the nylon handle and the other hand cupping the balloon into the pouch. The launcher will then pull back (no further than eight feet), aim at the target and let go.

NEVER PULL TUBING BACK AT EYE LEVEL!
NEVER ATTACH LAUNCHER TO A PERMANENT FIXTURE!
ALWAYS USE PROTECTIVE EYEWEAR!

WCI ACCEPTS NO RESPONSIBILITY OR LIABILITY FOR MISHANDLING, MISUSE, DAMAGE OR INJURY FROM NON-COMPLIANCE WITH INSTRUCTIONS. USER ASSUMES RESPONSIBILITY AND LIABILITY FOR USE OF THIS PRODUCT. MANUFACTURER WILL REPLACE OR REFUND ANY DEFECTIVE PRODUCT.

WCI, Morrison, CO 80465

303-697-5549

www.SillyTown.com / www.Water-Balloon-Slingshot.com

Dude@SillyTown.com

